


Junction unit
ON BATTERY



Removing/Refitting

- Open the bonnet lid.
- Move the retainers (A) and lift up the lid (B).

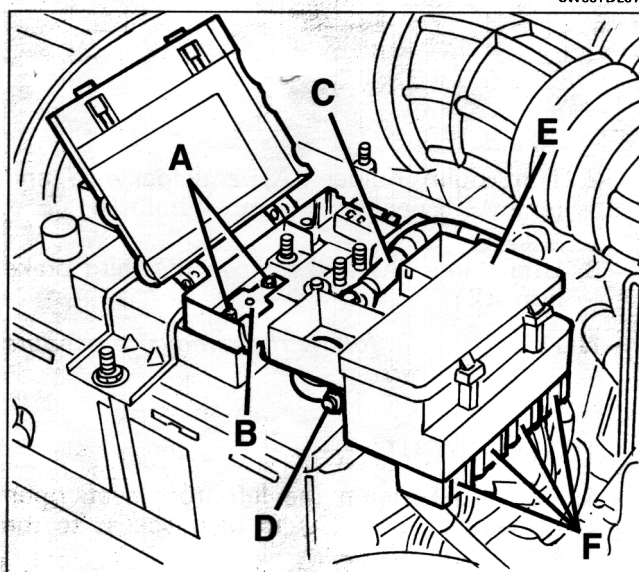

Undo the bolts (A) and remove bracket (B).


Disconnect the electrical connection (C).

Loosen the battery terminal (D) and move control unit (E).

Disconnect the electrical connections (E) and recover the control unit.

Refit by carrying out removal instructions in reverse order


55.

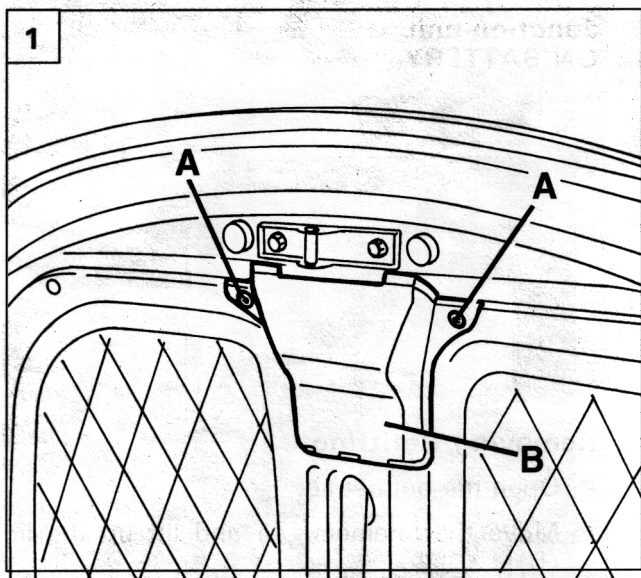

THIRD BRAKE LIGHT

Removing/Refitting

- Open the boot lid.
- 1. Undo bolts (A) and remove protection (B)

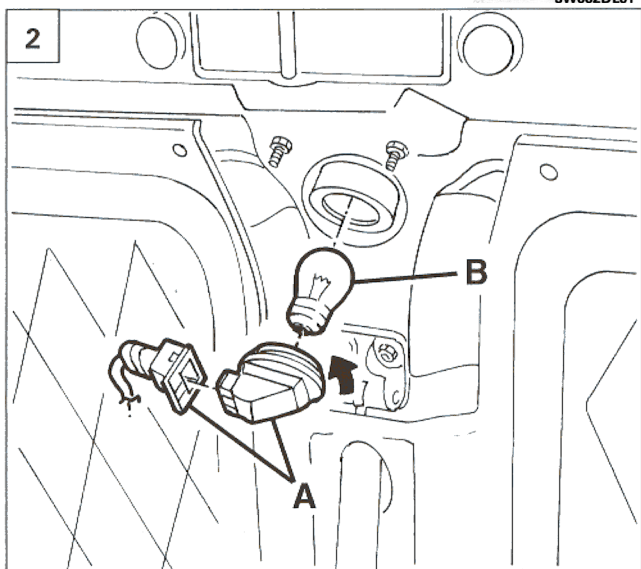

- 2. Turn bulb holder (A) anticlockwise and remove. If necessary, remove bulb (B).

- 3. Undo nuts (A) and remove the third brake light (B).

NOTE To refit, follow the removal procedure in reverse.

TESTER INPUT

- 4. Working beneath the left front seat, open protective cover (A) to gain access to the tester input.

